

## KSQ Ultra Combi-Cam™ Model Ultra 7440 User Instructions:

### Setting Your Own Combination:

- The combination is factory set at all 0's
- Combination must be set in opening position prior to resetting.
- On top of the lock is a code reset button. Press and keep pressed down during code reset.
- Set your personal combination by turning dials to desired combination, aligning with the arrow at the top of the lock.
- Release reset button and your combination is set.
- To lock door, turn the Ultra knob clockwise to the locked position and rotate one or more dials to secure the knob and obscure the code
- To open lock, turn dials to your personal combination and turn knob counter-clockwise (to the open padlock icon)



### Unlocking Cam Lock Using Key:

- Insert key into lock, rotate key clockwise to the unlock padlock icon symbol

### Discovering Combination Using Key:

- Open with master key to unlocked position
- While in the unlocked position, turn each dial until it stops.
- Once all the dials have stopped, the combination has been discovered. You may continue to use this code or change back to the factory default or your new 3-digit code.

### Stabiliser Pin

This lock comes with an optional stabiliser pin to prevent the lock from being rotated in an attempt to covertly or force the lock open. Make sure this has been installed by your locker/cabinet supplier or lock installer