

# miniK 10

**unique** electronic cam lock

● cabinets    ● lockers    ● boxes

## OPERATING MANUAL



**Kilitronik**  
by VEMUS


**!** Please read this manual before using the **miniK10**

## INDEX

Introduction.....	3
Description .....	4
Password Types .....	4
Operating Modes .....	4
Locker Mode (Multiple User Mode).....	4
Personal Mode.....	5
• Opening With User Password.....	5
• Changing User Password .....	5
What If Forget The Passwords .....	5
Service Password.....	6
• Opening With Service Password.....	6
• Changing Service Password.....	6
Master Password .....	6
• Opening With Master Password .....	6
• Changing Master Password .....	6
Programming The miniK10.....	7
Accessing The Program Menu.....	7
Program Table.....	7
Programming Option Definitions .....	8
Changing The Battery .....	8
Maintenance.....	9
General Warnings.....	9
Cams.....	9
Other.....	9
Light And Audio Notification .....	10
Limited Warranty .....	10
Liability Limits .....	10
Technical Specifications.....	10
Quick Info.....	11

## INTRODUCTION

1. Red LED
2. Green LED
3. Keypad
4. Lock Body
5. Closing Position
6. Knob Indicator
7. Opening Position
8. Knob
9. Mounting Nut
10. Lock Body
11. Battery Cover
12. Battery Cover Screw
13. ID Label
14. Hand Knob Frame
15. Cam
16. Cam Screw
17. Cylinder Nut

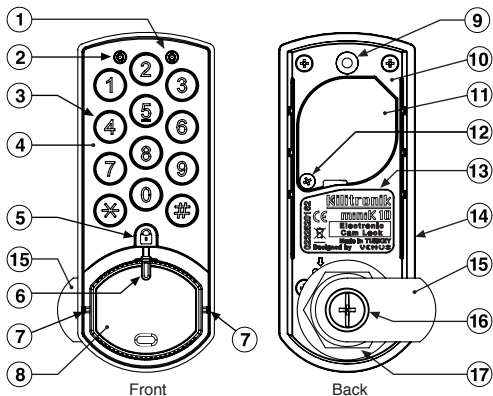

## DESCRIPTION:

miniK10 electronic cabinet lock with master/manager code, personal use functionality, and up to 10 years battery life. miniK10 can be installed for both right and left hand installations - anywhere that needs flexibility of master/manager codes. The eco-friendly miniK10 offers both convenience of far less frequent battery changes and a more environmentally friendly solution.



## PASSWORD TYPES:

The miniK10 has three potential password levels -

1. User password
2. Service password (must activate in Program 5.1)
3. Master password

The user and master passwords should be changed prior to installation and tested. Write down new passwords and keep in a safe place. It is not possible to open lock if you forget your password.

## OPERATING MODES:


The miniK10 can operate in two different modes:

1. Personal Mode - Fixed password. The user will open lock each time with the same own password.
2. Locker Mode (factory default) - user enters in their code when lock is in unlocked position and rotates handle to lock. Upon returning uses same code to open. Next user can repeat the process with their own unique password.

## LOCKER MODE (MULTIPLE USER MODE)





In locker mode, opening and closing with a password process is same as Personal User. However, each time lock is in open position, each user enters in their own unique 4-digit code to lock and then use that the same code to again open the MiniK10. Popular application is for gym lockers.



 Lock is open, first user enters in <3-4-2-8> and closes lock. They return and enter the same <3-4-2-8> to open the lock. Lock is open, next user enters in their code of <7-8-5-2>, closes lock and so on.

## **ATTENTION:**


By default, the miniK10 is set to Locker Mode. The miniK10 can easily be set to Personal Mode with either of the two below steps:

1. Before battery tab is removed, hold down  key, pull the tab and key the  key pressed 3 seconds
2. Convert lock to Personal Mode at any time by entering in  MasterCode  1 0

## **PERSONAL MODE**




### **• OPENING WITH USER PASSWORD:**

- 1) Enter your 4-digit user password. On first use factory default is <1-0-1-0>
- 2) Rotate handle within 5 seconds to opening direction and there will be a confirmation beep.

 *Below illustrations show examples of lock installed for right handed door. Lock can be installed for left or right handed*



### **• CHANGING USER PASSWORD:**

If personal mode is selected (default), press  and old password. Press  button again and enter new 4-digit user password. Press  button again and approve new password. You will get a confirmation beep and green LED light will blink.





## **NOTE: WHAT HAPPENS IF USER FORGETS THEIR PASSWORD?**

### **Locker Mode (Multiple User):**

Use Master code to unlock and turn handle to open position. Lock is now ready for next user to enter in their unique code.

### **Personal User Mode:**

- 1) Use master code to reset the lock to factory defaults.  
 MasterCode  4 0
- 2) Default user code is now < 1-0-1-0 > and can be changed.

**SERVICE PASSWORD:** By default, service password is not active. Activate with Program 5.1. Service password allows lock to be opened only and none of lock features can be programmed.

• **OPENING WITH SERVICE PASSWORD:** Default <1-0-1-0-1>

If service password function is active, 1) press \* button and enter current 5-digit service password and press # button. 2) Rotate handle within 5 second to opening direction. You will get a confirmation beep from lock and green LED light will blink.



• **CHANGING SERVICE PASSWORD:**

When you have selected service password in program menu, press \* button twice and enter current 5-digit service password. Press \* button again and enter new 5-digit service password. Press \* button again and approve new password. You will get a confirmation beep from lock and green LED lights will blink.



• **MASTER PASSWORD:** Opens lock and grants access to all programming features.

**OPENING WITH MASTER PASSWORD:** Default <1-0-1-0-1-0>

1) Press the # button and enter current 6-digit master password and press # button. 2) Rotate handle within 5 seconds to opening direction. You will get a confirmation beep from lock and green LED light will blink.



• **CHANGING MASTER PASSWORD:** Set new master password and test BEFORE installing lock. Press # button twice, and then enter old 6-digit master password. Press # button again and enter new 6-digit master password. Press # button again and approve new password. You will get a confirmation beep from lock.



## PROGRAMMING THE miniK10

The miniK10 can be customized from factory default settings tailored to your needs.

### ACCESSING THE PROGRAM MENU:

Press the **#** button and then enter the 6-digit master password. Press the **\*** button. The Red and Green led's will blink alternately. Press the program and selection numbers repeatedly.



**NOTE:** To the right would change to password being required to close lock



**MASTER PASSWORD**



PROG. NO      SELECT. NO

PROG. NO	SELECT. NO	Explanation:
0	1	0-1 Restores factory default settings: <b>Prog. No 1-1:</b> Locker mode operation (Multiple user operation) <b>Prog. No 2-1:</b> Audible beeps and confirmations <b>Prog. No 3-0:</b> Penalty operation is not active <b>Prog. No 4-0:</b> Sets user password to factory default <b>Prog. No 5-0:</b> Service password is not active <b>Prog. No 6-1:</b> Closing without password active <b>Prog. No 7-0:</b> Warning of open door is not active <b>Prog. No 8-0:</b> Resetting user password is not active <b>Prog. No 9-0:</b> Blocking of the lock is not active
		<b>1</b> Personal Operation (individual operation)
1	0	<b>1</b> Locker Mode Operation (multiple user)
		<b>0</b> Mute operation except for warnings
2	1	<b>1</b> Audible operation- button feedback, warnings and confirmations
		<b>0</b> Penalty passive
3	1	<b>1</b> Penalty active (lock blocked for 5 min. if wrong code entered 3 times)
		<b>0</b> Sets user default code to factory default (for forgotten combinations)
4	1	-
		<b>0</b> Service password is passive
5	1	<b>1</b> Service password is active
		<b>0</b> Closing with password required is active
6	1	<b>1</b> Closing without password is active (for personal usage)
		<b>0</b> Warning of door open is passive
7	1	<b>1</b> Warning of door open is active (beeps 8 times every 5 sec.)
		<b>0</b> Resetting user password is passive (if service password is active)
8	1	<b>1</b> Resetting user password is active (if service password is active)
		<b>0</b> Blocking of the lock is passive (if service password is active)
9	1	<b>1</b> Blocking of the lock is active after using service password (if it is active)

## PROGRAMMING OPTION DEFINITIONS:

0	<b>Restoring factory settings:</b> All factory default settings are restored (see program menu). User password becomes <1-0-1-0> and master password becomes <1-0-1-0-1-0>.
1	<b>Locker mode:</b> Factory default is Personal mode. Personal mode allows one 4-digit code to be entered that would remain the same code for one user. Locker mode is for multiple users whereby each user walks up to an open miniK10 and enters in their own unique code to close the lock and then to open it again. When open, next user enters in a new code, etc.
2	<b>Audible volume control:</b> All audio warnings can be turned off if mute operation is selected (except warning beeps).
3	<b>Penalty operation:</b> Prevents tampering of lock by unauthorized people. Lock is blocked for 5 min if wrong password is entered three times consecutively. Factory default is that this feature is not active.
4	<b>User code reset:</b> Sets user factory default to <1-0-1-0>.
5	<b>Service password:</b> Lock can be opened with service password if user password is forgotten. Factory service default password is <1-0-1-0-1>. No programming features can be accessed with service password. Factory default is that this feature is not active.
6	<b>Closing modes:</b> Factory default - miniK10 does not require a password to lock. The other option is it can require a password to lock.
7	<b>Door open warning:</b> After door is open for one minute, lock gives an audible warning to user with 8 beeps every 5 sec to notify user that the door has been left open.
8	<b>Resetting user password:</b> If the lock is opened with service password (and service password is active), user password can be reset. (see program #5 on service passwords). Factory default is that the service password access does not allow the user password to be reset (only opens up the lock).
9	<b>Blocking the lock:</b> If lock opened with service password, it can be blocked from further user password access. This would insure service password is only used to access locks for emergency lockouts. Master password access would then be required to set up user password again (0-1 Factory default reset). Factory default is that this feature is passive.

## CHANGING THE BATTERY:

Lock operates on a 3V lithium coin cell CR2450 battery located on back side of device. Remove screw located on cover of battery and replace it with new battery. Battery life is up to 10 years. The red LED light blinks 5 times after each operation when battery is low and it is possible to open and close lock for 100-150 times after you get the initial low battery warning.



## MAINTENANCE:



- Clean front of lock with a mild damp cloth with detergent if needed.
- Do not use any hard or scratching cleanser.
- Do not clean with chemical materials that melt plastic (thinner, acetone, etc.)
- Be careful not to spill water on lock.

## GENERAL WARNINGS:



- Read manual before using lock.
- Periodically check nuts and screws to be tightened.
- Do not over-tighten nuts or screws. Do not use an electric screw gun during installation unless equipped with a torque adjuster. The maximum torque on the cylinder screw is 2Nm.
- Set and test user and master password prior to installing the lock
- Change all default passwords with your own passwords.
- Common sense, but we must say it... Do not keep the passwords in the cabinet where the lock is being installed!
- It is not possible to open lock if installed and you forget the user and master password.
- Lock gives a warning beep when incorrect passwords have been entered in repeatedly.
- Not possible for front side of lock to be opened by breaking or trying to force open lock.
- Use CR2450 3.0V Lithium batteries.
- Remember that battery consumption is high when programs 2, 3, and 7 are active.

## CAMS:

- One 38mm Axis straight cam
- Cams can be placed at increments of 90 degrees
- The Stop Cam (#4) in installation instructions can be positioned for turning the cam clockwise or counter-clockwise



7/8" Straight Cam- 22mm  
Optional Cost



1-1/2" Straight Cam 38mm  
Axis straight Cam supplied as  
standard



## OTHER:

Battery failure override- The miniK10 has 2 external nodes surrounding the red and green indicator lights where an external battery can be connected long enough to enter in the correct code to open the lock allowing new batteries to be installed.



## ATTENTION!

In case of any failure, inform the vendor in writing of the detailed description of the failure. In case of any intervention in the device, such as attempting to repair the lock, the device will be **VOID OF WARRANTY**.

## LIGHT AND AUDIO NOTIFICATION:

<b>Password is accepted</b>	Green LED blinks with 2 repeated audio warnings.
<b>Wrong password</b>	Red LED blinks with 4 repeated audio warnings.
<b>Low battery</b>	Red LED blinks 5 times after each operation.
<b>Lock is open</b>	1 min after door is opened, lock gives audible warning 8 times every 5 sec.

## LIMITED WARRANTY:


Kilitronik offers a one year limited warranty all products to be free from manufacturing defects in materials and workmanship. This warranty does not cover the battery, lost combinations or damages caused by improper mounting, improper or unreasonable use or using power tools.


## LIABILITY LIMITS:


This is a limited warranty and is in lieu of all other warranties (including the implied warranties of merchantability and fitness for use) and under no circumstances shall Kilitronik or KSQ be liable for any incidental or consequential damages or losses.

## TECHNICAL SPECIFICATIONS:

Weight	71 g (2.5 oz) (excluding cam and mounting)
Key Pad	Silicone Keypad with metal dome
Operating Temperature	+10 / +50 °C (50 - 122 °F)
Storage Temperature	+0 / +60 °C (32 - 140 °F)
Operating Moisture	20% - 80% Rh (without condensation)
Replaceable Battery	3V Lithium CR2450
Battery Life (*)	up to 10 years (for 10 uses a day)

 **ATTENTION:** (\*) (Battery life may vary in accordance with battery brand, programming parameters and environmental conditions of the product is used.)

 **ATTENTION:** Remember to write down your passwords after programming and prior to installing lock. It is not possible to open lock if it is installed and you forget your passwords.

 **ATTENTION:** miniK10 is made for only interior usage.

## DEFAULT PASSWORDS

1 0 1 0  
 USER PASSWORD

( 1 0 1 0 1 )  
 IF SERVICE PASSWORD ACTIVE

1 0 1 0 1 0  
 MASTER PASSWORD

**⚠ ATTENTION:**  
 These are default settings by the factory. Once they are changed, be sure to write down your new code!

## OPENING/CLOSING WITH USER PASSWORD



## CHANGING USER PASSWORD

\* 1 0 1 0 \* X X X X \*  
 DEFAULT PASSWORD NEW PASSWORD

## OPENING WITH USER MASTER PASSWORD



## CHANGING MASTER PASSWORD

# # 1 0 1 0 1 0 # X X X X X X #  
 DEFAULT PASSWORD NEW PASSWORD



Opening direction depends on which type of door miniK10 is installed. All opening illustrations depict right handed door installation.

# miniK 10

unique electronic cam lock

Schools



Hospitals



Spa  
and  
Baths



In  
Mailboxes



Sports Halls



Staff Lockers

KEYWATCH SYSTEMS QUEENSLAND  
PO BOX 7648 GCMC QLD 9726

(07) 5526 2726  
(07) 5600 0821



[www.minik10.com.au](http://www.minik10.com.au)



**Keytronik** and **miniK 10** are trademarks of VEMUS Endüstriyel Elektronik Ltd. Şti.

Rev.01 011 580 0425